


## INSTALLATION GUIDE

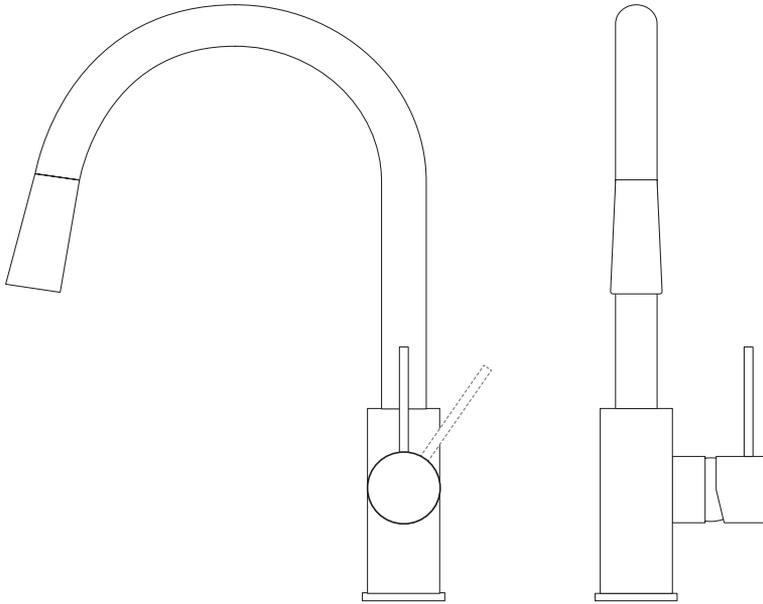

## INSTALLATION GUIDE

Remove the unit from its packaging. Before disposing, packaging and taking unit from your sales person, inspect the unit to make sure it is in good condition.

Should inspection reveal any damage or defects in the finish, contact your salesman. The warranty does not cover damages or defects in the finish once the unit has been installed.

It is recommended that you place the unit in the bathroom before you start. Sectional units should be disassembled if necessary. Conserve all nuts and bolts.

Don't over bend the hose, ensure no hose deformation before or after installation.

**CAUTION: FOR BEST RESULTS, WE STRONGLY RECOMMEND THE INSTALLATION OF THIS FAUCET BE DONE BY A LICENSED PLUMBER.**






**Before assembly, flush the water supply pipes thoroughly to drain debris inside (allow the water to run with the main stopcock open for 3min), otherwise dirty particles might affect the function of the faucet.**

## CARE AND MAINTENANCE




- **Avoid** polishing powder, cleaning powder and any kind of detergent.
- To clean your Valley faucet, wash with a wet nonabrasive soapy cloth. Then wipe dry with a soft towel or cloth. We recommend this be done on a regular basis.
- Clean the aerator gently with a toothbrush. Allow the water to flow for approximately 60 seconds, then reattach the aerator.

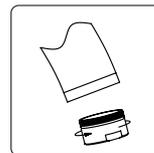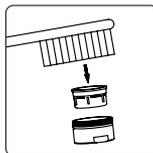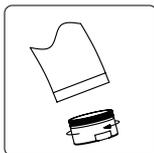


## INSTALLATION GUIDE

01

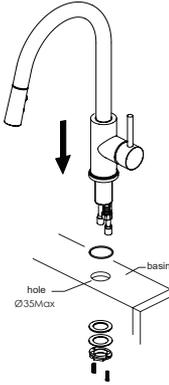


Make sure there is a 1  $\frac{3}{8}$ " hole on the basin or countertop before installing the faucet, Unscrew the fitting assembly from the bottom of the body, then pass the body through the hole, don't forget to fix the o-ring between the bottom of the faucet and the basin or countertop.

02

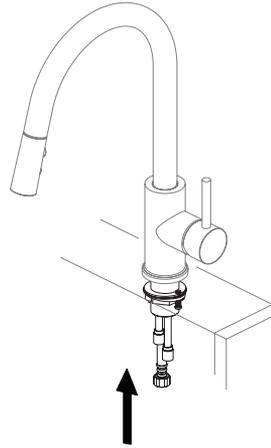


Install the threading rod and the steel ring, Secure the faucet with the nut provided fixing nuts.

03

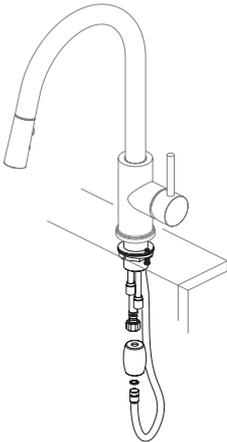


Remove the pull-out hose from the bottom of the body, Insert the stop-valve sleeve to the connector of the copper-tube, put the lead ball through the pull-out hose.

04

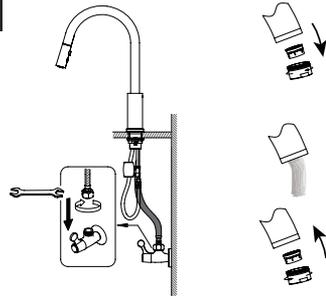

Attach the water lines to your main water supply lines. Ensure that you are connecting the hot and cold lines appropriately. body "Red" for connecting to the hot water, and "Blue" for connecting to the cold water. Remove the aerator. Run water and check for leaks. Reinstall the aerator

## STANDARD PART LIST

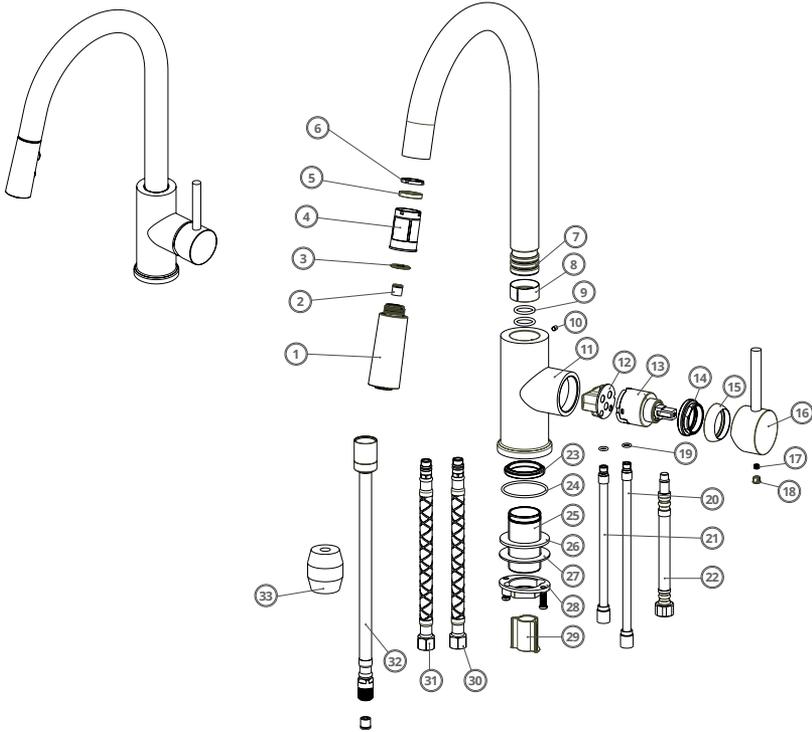

NO.	PART NAME	QTY.
1	Hand Spray	1
2	Flow Restrictive Check Vale	2
3	Water Controller	1
4	Plastic Cover	1
5	Magnet	1
6	Plastic Ring	1
7	Spout	1
8	Plastic Card	1
9	O-rings	1
10	Fixing Screw	2
11	Body Housing	1

NO.	PART NAME	QTY.
12	Brass Core	1
13	35mm Flat Base Cartridge	1
14	Cartridge Nut	1
15	Cartridge Cover	1
17	Hexagonal Screw	1
18	Button	1
19	O-rings	2
20	197mm Copper Pipe	1
21	167mm Copper Pipe	1
22	Stainless Steel Hose	1

NO.	PART NAME	QTY.
23	Base	1
24	O-ring	1
25	Threading Rod	1
26	Rubber Washer	1
27	Stainless Steel Ring	1
28	Fixing Nut	1
29	Plastic Cover	1
30	Inlet Hose(Cold)	1
31	Inlet Hose(Hot)	1
32	Pull Out Hose	1
33	Metal Ball	