


RR-S99WHT USER GUIDE

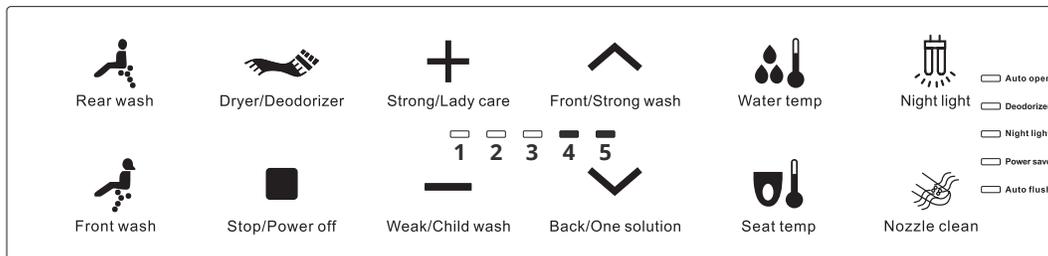

HOW TO USE

REMOTE CONTROL

The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.

REAR WASH

Press , nozzle reaches out to work. Press again, it changes to rear oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again, stops oscillating cleansing, it switches back to rear wash.

WATER PRESSURE ADJUSTMENT

4 - Adjust comfortable water pressure by pressing:

Strong/Lady care Weak/Child wash


NOZZLE POSITION ADJUSTMENT

5 - Adjust nozzle position by pressing:

Front/Strong wash Back/One solution

NOTE: Under oscillating cleaning, the nozzle position adjustment is unavailable

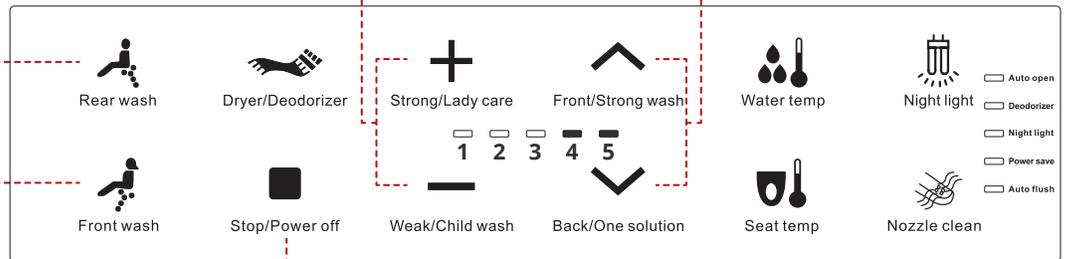

FRONT WASH

Press , nozzle reaches out to work; Press again, it changes to front oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again to stop oscillating cleansing, it switches back to front wash.

STOP

Stop the current cleaning operation. If do not press the stop button, rear washing/ front washing will stop automatically after 2 min. Press this button for 3sec. to turn it off

DRYER

Press , start warm air drying. Press again change to removable air drying, swings back or front. Press again to stop.

WARM AIR TEMP ADJUSTMENT

4 - Adjust warm air temperature by pressing:

Strong/Lady care Weak/Child wash

DRYER POSITION ADJUSTMENT

5 - Adjust dryer position by pressing:

Front/Strong wash Back/One solution


NOTE: Under removable drying, the dryer position adjustment is unavailable

NIGHT LIGHT

Press this button to turn on the light, press again to close the light, and the corresponding light on the right will be on or off simultaneously. Repeatable switching.

When you turn on auto flush, smart toilet will flush firstly before you press drying

Deodorizer will turn off when under drying function. The deodorizer will auto-open when drying finished and it will keep working for 1.5 minutes when people leave the toilet seat.

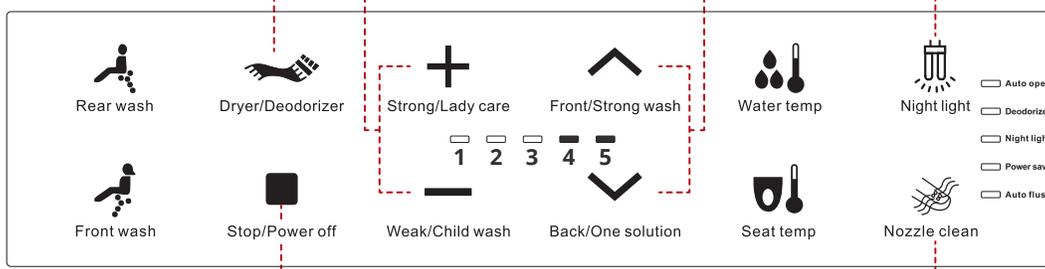

STOP

Turn off the drying function. Or the warm air will stop automatically after running for 4 minutes.

NOZZLE CLEAN

Press this button to enter nozzle cleaning, then water flows out and you can clean the nozzle.


Nozzle clean is effective when people are not seated. Nozzle will automatically clean the peripheral art of the nozzle before rear wash and front wash.

HOW TO USE

REMOTE CONTROL

The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.

DEODORIZER	LADY CARE	STRONG WASH	WATER TEMP
<p>Press this button for 3 sec. it stops auto deodorization. Press again for 3 sec. it activates auto deodorization, light will shine on the right side indicator</p> <p> Deodorizer</p>	<p>Press this button to enter lady care in idle mode, the nozzle reaches out to work and the water temp is set to the highest level (39°C), the water pressure is set to 2-level, cleaning position is set as default. Water temp/Water pressure unadjustable, cleaning position is adjustable in this mode, and automatic ends after cleaning for 2 mins. Press  to end.</p>	<p>Press this button to enter the powerful washing mode in idle mode, the nozzle reaches out to work and the hole starts to effluent. Water pressure is at the highest level, after washing for 2 mins to end, press  to end.</p>	<p>Press this button to enter water temp adjustment.</p> <p>4 - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, water temp change to the next level.</p>

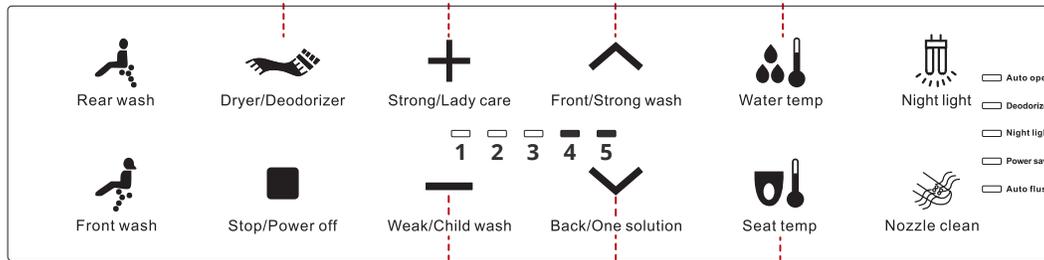

 Rear wash
  Dryer/Deodorizer
  Strong/Lady care
  Front/Strong wash
  Water temp
  Night light
  Auto open
 Front wash
  Stop/Power off
  Weak/Child wash
  Back/One solution
  Seat temp
  Nozzle clean
  Deodorizer
 Night light
 Power save
 Auto flush

CHILD WASH	ONE SOLUTION	SEAT TEMP
<p>Press this button to enter child wash in idle mode, nozzle reaches out to work.</p> <p>The nozzle position is at the front (Level 5), mini water pressure (Level 1), and the water temp is mid grade (36°C) The washing time is 30 sec.</p> <p>To end press  to end.</p> <p>NOTE: Under this mode cleaning position/ water pressure/ water temp are unadjustable.</p>	<p>Press this button to start in idle mode</p> <p>The order is:</p> <ol style="list-style-type: none"> 1. Rear wash 40 sec. 2. Oscillate wash 20 sec. 3. Warm air dryer 2 mins. 4. Stop <p>In this mode press  to end.</p>	<p>Press this button to enter seat temp adjustment.</p> <p>4 - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, seat temp change to the next level.</p> <p>Attention: To prevent the low temp scalding, the toilet seat will automatically lowered to below 35°C after sit on the seat for 10 minutes.</p>

Open/Set	Close/Power save	Flush/Auto flush
		

OPEN/SET	CLOSE / POWER SAVE	FLUSH/AUTO FLUSH
<p>Press this button to open up the seat when the seat is closed. Press this button for 3sec. to turn on the automatic seat function. The seat is automatically opened when the person is close to the toilet. The seat is automatically closed after a person has left for two minutes. Automatic opening or closing of the seat is valid only after activating the automatic seat function; The sensor only detects the movement of the human body, and when standing still for a long time, it may cause abnormal movements.</p> <p>Attention: During the electric opening and closing process, do not forcibly close or sway the toilet lid, this will cause a malfunction of it.</p>	<p>When the seat is open, press this button to soft close the seat; Press this button for 3sec, to start power saving mode. After a delay of 1.5 minutes, it enters power-saving mode. In the power-saving state, the seat temperature is kept at 25°C, and the next time it will automatically restore the settings before the power-saving mode.</p>	<p>When pressed, the corresponding indicator will blink on the remote control, and it will flush the toilet once.</p> <p>Press the button for 3sec, to start auto-flush. After leaving the seat for 5sec, it will auto-flush the toilet once. Press again for 3sec, to close it.</p> <p>Attention: When people sit on the toilet and flush the toilet with the remote control or side button. After leaving the toilet, the auto-flush option will not work.</p>

HOW TO PAIR YOUR RR-S99WHT CONTROLLER

1 Press the **TEST** button to **turn OFF** the VA-S99WHT/VA-S66MBLK Smart Toilet.

2 Press the **STOP / POWER OFF** button to **turn ON** the RR-S99WHT Remote Controller.

3 Press and hold both the **WEAK/CHILD WASH** and **BACK/ONE SOLUTION** buttons at the same time for **3 seconds**.

4

As soon as the indicator lights begin to blink, press the **RESET** button to **turn ON** the VA-S99WHT/VA-S66MBLK Smart Toilet.

5 Pairing is complete. Your RR-S99WHT Remote Controller is now successfully connected to your VA-S99WHT/VA-S66MBLK Smart Toilet.