

INSTALLATION GUIDE

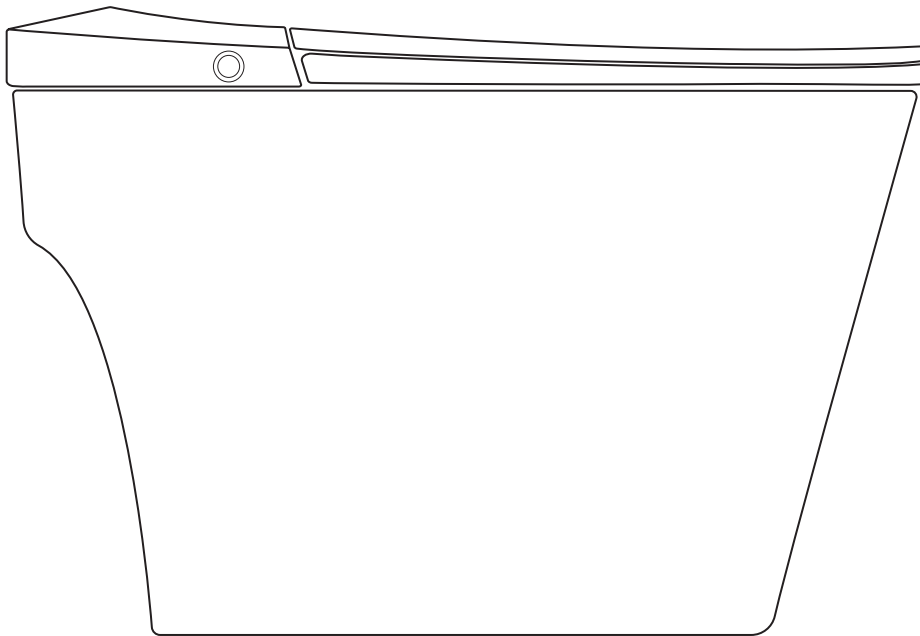

INSTALLATION GUIDE

Thank you for choosing Valley Bath & Kitchen.

This guide provides important information for the safe and proper installation of your smart toilet. Please read all instructions carefully before beginning.

BEFORE YOU BEGIN

- Read this manual completely before starting installation.
- Ensure installation complies with all local plumbing and electrical codes.
- Carefully remove the unit from its packaging and inspect it for damage.
- Do not install the product if any damage or defects are found. Contact your place of purchase immediately.

Important:

Damage to the finish or product after installation is not covered under warranty. Valley Bath & Kitchen is not responsible for shipping damage once the product has been delivered to the carrier in good condition. Any shipping damage claims must be filed directly with the carrier.

- It is recommended to place the toilet in the bathroom prior to installation to confirm fit and positioning.
- Keep all hardware, nuts, and bolts until installation is complete.

REQUIRED TOOLS



WRENCH



SCREWDRIVER



CAUTION

- **DO NOT DISASSEMBLE, REPAIR, OR MODIFY THIS PRODUCT.**
- **THE WATER SUPPLY MUST BE CLEAN POTABLE WATER ONLY. DO NOT USE RAINWATER, GREYWATER, RECYCLED WATER, OR SEAWATER.**

SAFETY PRECAUTIONS

Read and follow all safety instructions carefully. Failure to do so may result in fire, electric shock, injury, or property damage.

WARNING

- Do not touch the electrical outlet with wet hands.
- Do not pour water, hot water, or cleaning agents onto the toilet body or electrical components.
- Do not disassemble or attempt to repair the product yourself.
- Do not install the toilet in an RV, boat, or any moving vehicle.
- Use only tap water or potable well water.

Immediately Disconnect Power and Shut Off Water If:

- Water is leaking from the pipe or inside the unit
- The product is cracked or damaged
- There is unusual noise or odor
- Smoke is present
- The unit becomes unusually hot
- There is a blockage
- The seat becomes loose or detached

Continuing to use the toilet under these conditions may result in fire, electric shock, short circuit, injury, or water damage.

Low-Temperature Scalding Warning

Extended use of the heated seat at high temperature may cause low-temperature burns.

If seated for long periods:

- Reduce the seat temperature
- Turn off the seat heating function if necessary

Electrical Safety

- This product must be installed in a dry, well-ventilated environment.
- Do not install in areas exposed to excessive moisture.
- If installed in a bathroom, ensure proper ventilation is available.

The unit must be properly grounded. Improper grounding may result in electric shock.


Confirm that the outlet meets the following requirements:

- a) Protected by a high-sensitivity GFCI (15mA or lower), or installed with an appropriate isolation transformer (1.5kVA–3kVA).
- b) Located away from bathtubs and wet zones.

If unsure, consult a licensed electrician.


INSTALLATION GUIDE

Product materials, features, and specifications may change without notice due to improvements or upgrades. Refer to the actual product if minor differences exist

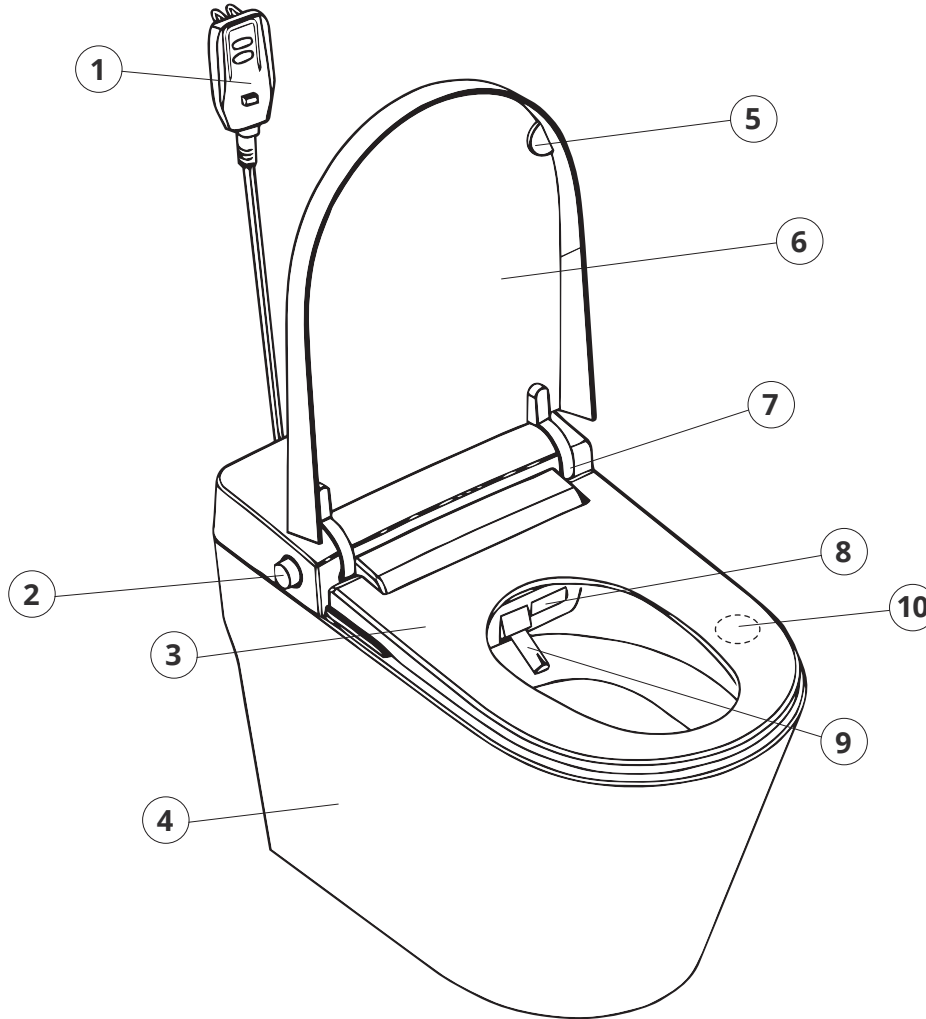


1. POWER PLUG
(ELECTRIC LEAKAGE PROTECTION)
2. SIDE KNOB
3. HEATED SEAT
4. TOILET BOWL
5. CUSHION PAD
6. TOILET LID
7. DAMPER
8. DRYER OUTLET
9. NOZZLE
10. SENSING AREA

REMOTE CONTROL

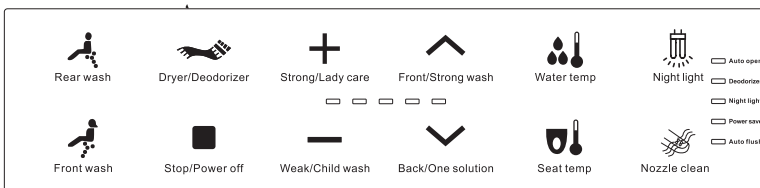

CONTROL PANEL

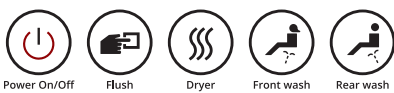

INDICATOR LIGHT




INSTALLATION GUIDE

FUNCTIONS	DESCRIPTION
Rear wash	Provide rear cleansing
Rear oscillating Wash	Move the nozzle back and forth for rear cleansing
Front wash	Provide cleansing by front cleansing nozzle with a gentle spray
Front oscillating Wash	Move the nozzle back and forth with a gentle spray
Child wash	Children's special warm water gentle cleaning
One solution	Auto clean, flush and dry
Strong wash	A large amount of water to clean the buttocks to promote a laxative
Lady care	Special cleaning of the female's physiological period
Nozzle position adjustment	Adjust the suitable washing positions
Temperature adjustment	Set the temperature of the seat and water
Water pressure adjustment	Change cleaning water pressure
Seat sensor	Functions activated by sitting on the seat
Drying	Dry the users after cleansing
Movable drying	Move the air outlet back and forth for drying
Changing drying intensity Wann	Control the temperature of warm air from the dryer
air position adjustment	Set the position of the air outlet
Nozzle self-clean	Provide nozzle self-cleaning before washing
Smart remote control	Use the remote control to set up and control the toilet
Deodorizer	Removing odors
Saving energy	Saves electricity
Night light	Preparations for insufficient light
Soft close	Damper in the seat and cover, to make it close softly
Auto flush	Auto bowl unit cleaning after users walk away
Power switch	Turn the power on and off
Flush even if power off Ceramic	Push the side button to flush when the power is off
bowl pre-wet	Water comes out of the nozzle to make the ceramic bowl wet
Auto open-up seat	When near the toilet, the seat cover opens automatically and closes automatically when leaving
Foot sensor flush	When the foot has crossed the sensor switch at the bottom, the flushing function is activated
Foot sensor for open up cover	Opening up or closing the seat and covering by foot sensor
UV sterilization	Automatically activate after the human body left the seat

INSTALLATION GUIDE


01 PREPARE AND INSTALL THE SUPPLY STOP ADAPTER

1. Locate the existing shut-off valve (supply stop).
2. Turn the valve fully ON and allow water to run for approximately 60 seconds. This flushes debris from the line that could damage internal components.
3. Turn the valve fully OFF.
4. If replacing the supply stop, remove the old valve according to plumbing standards.
5. Apply thread sealing tape (Teflon tape) clockwise to the exposed 1/2" NPT male water supply pipe threads. Wrap 3–5 full turns, starting at the second thread to prevent tape from entering the water line.
6. Thread the supplied adapter onto the pipe. Ensure the directional arrow on the adapter points toward the toilet.
7. Tighten by hand until snug, then tighten an additional 1–2 turns with a wrench.
8. Do not overtighten. Excessive force may crack fittings or damage threads.

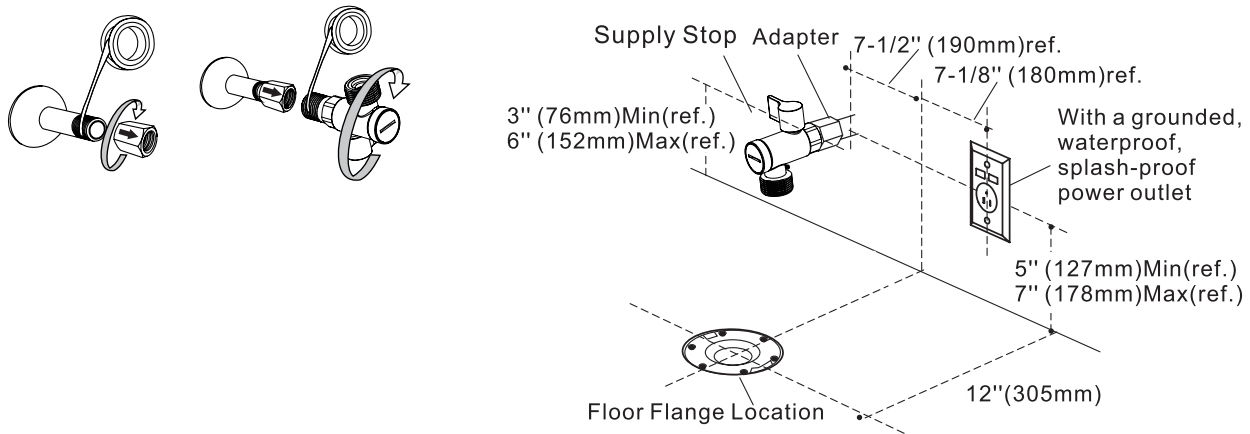

02 VERIFY WATER FLOW AND PRESSURE

1. Attach a hose and direct it into a bucket (minimum 3 gallons / 11.4L). If no hose is available, cover the outlet with a cloth and direct water into a bucket.
2. Turn on the supply stop.
3. Confirm that at least 1 gallon of water flows within 10 seconds.
4. If water pressure is insufficient, remove the flow regulator or install a booster pump.
5. Turn off the supply stop and remove the hose.

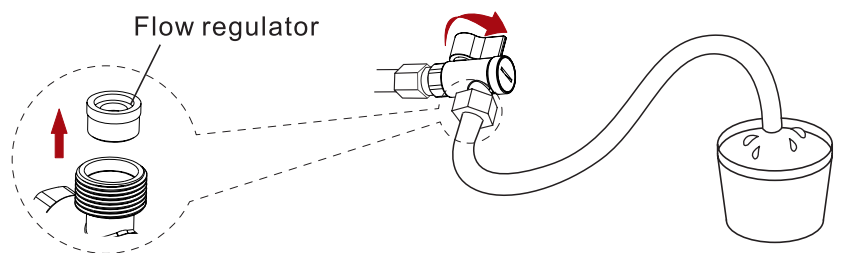




IF THE ROUGH-IN (DISTANCE FROM FINISHED WALL TO CENTER OF DRAIN OUTLET) IS LESS THAN 12" (305MM), THE TOILET LID MAY CONTACT THE WALL WHEN OPENED.




03 INSTALL TOILET FLANGE (NEW INSTALLATIONS ONLY)

Install toilet flange according to plumbing standards. Insert flange bolts.

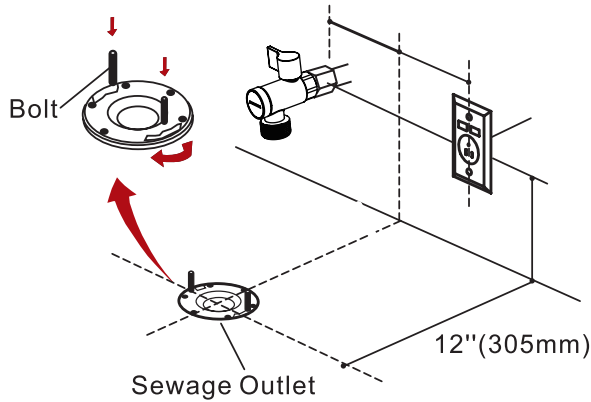

04 REMOVE THE SEAT-LID ASSEMBLY


Remove the decorative screw covers and unscrew the long mounting screws. Lift the seat-lid assembly straight up from the base.

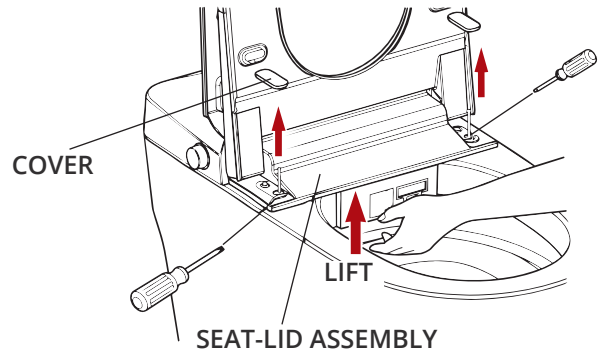

05 INSTALL SEALING RING


1. Turn the toilet upside down carefully on protective padding.
2. Position the sealing ring evenly around the discharge outlet.
3. Ensure the ring sits flat and centered.
4. Do not stretch or deform the sealing ring.

Improper placement may result in leakage.


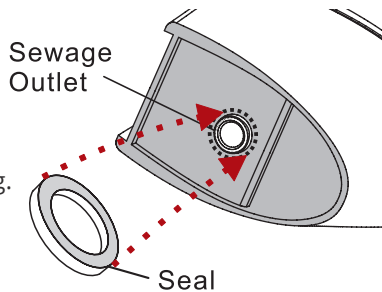


06 POSITION AND SECURE TOILET

1. Carefully place the toilet onto the flange.
2. Ensure bolts align with the mounting holes.
3. Install washers and nuts.
4. Tighten evenly using a wrench. Do not overtighten.

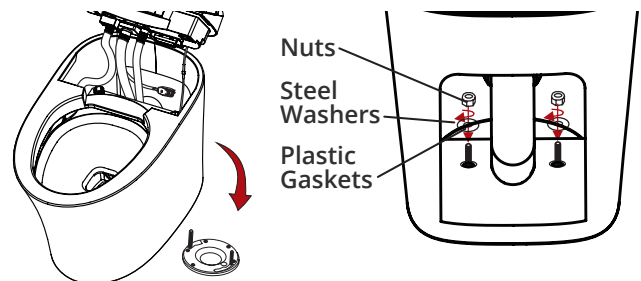

07 INSTALL BACKUP BATTERY

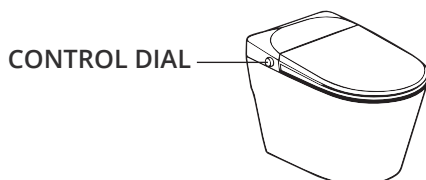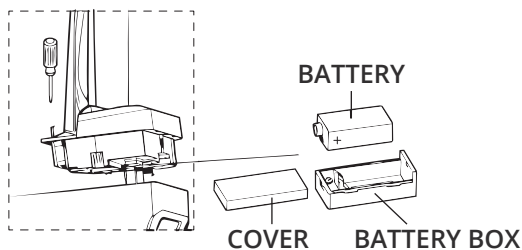

1. Remove the battery compartment cover.
2. Insert alkaline batteries.
3. Replace the cover securely.
4. Press the control dial on the side to confirm flushing function.

NOTE:


- Use alkaline batteries only.
- Batteries provide flushing capability during power failure.
- Dispose of used batteries at a designated recycling center.

INSTALLATION GUIDE

08 REINSTALL SEAT-LID ASSEMBLY


Reinstall the seat-lid assembly and secure screws and covers.

NOTE: Do not force or apply excessive pressure. seat-lid assembly.

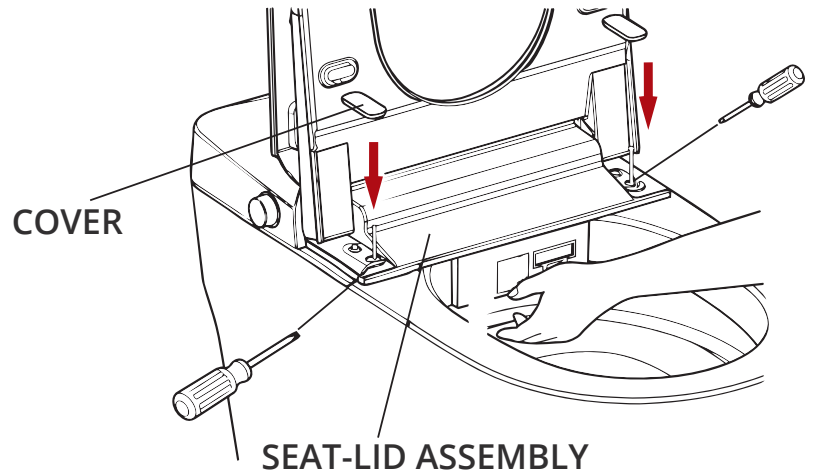


09 CONNECT WATER SUPPLY

1. Connect the water inlet hose to the supply stop.
2. Hand-tighten first, then tighten slightly with a wrench.
3. Turn on the supply stop.
4. Check all connections for leaks.
5. Apply silicone sealant around the base of the toilet.
6. Allow 24 hours curing time before use.

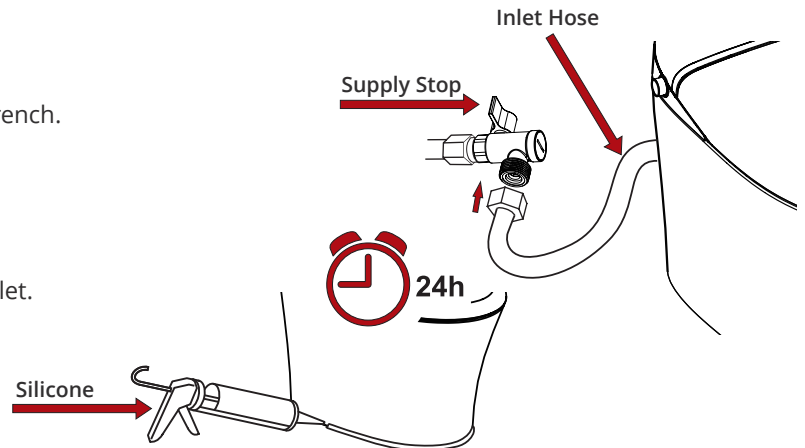

10 INSTALL REMOTE BRACKET

1. Clean the wall surface thoroughly.
2. Remove the backing from the double-sided tape.
3. Press the bracket firmly and evenly onto the wall.
4. Allow adhesive to set for 15 minutes before use.

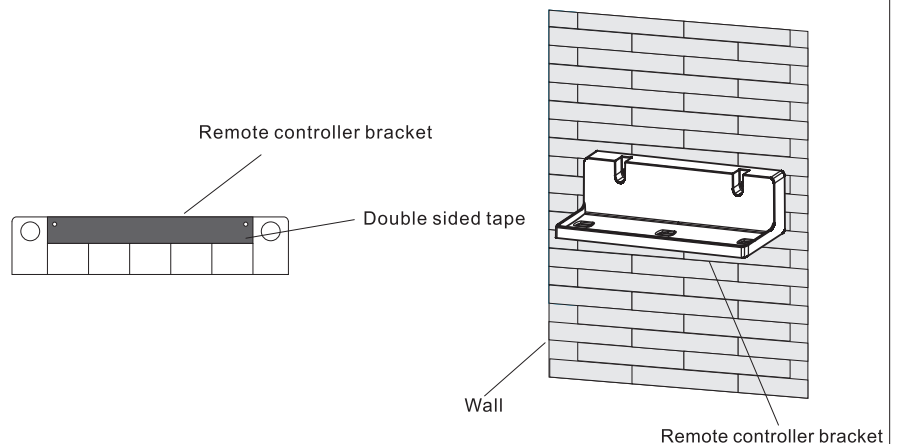


HOW TO USE

REMOTE CONTROL



The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.

REAR WASH

Press , nozzle reaches out to work. Press again, it changes to rear oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again, stops oscillating cleansing, it switches back to rear wash.

WATER PRESSURE ADJUSTMENT



4 - Adjust comfortable water pressure by pressing:

Strong/Lady care Weak/Child wash


NOZZLE POSITION ADJUSTMENT

5 - Adjust nozzle position by pressing:


 

Front/Strong wash Back/One solution

NOTE: Under oscillating cleaning, the nozzle position adjustment is unavailable

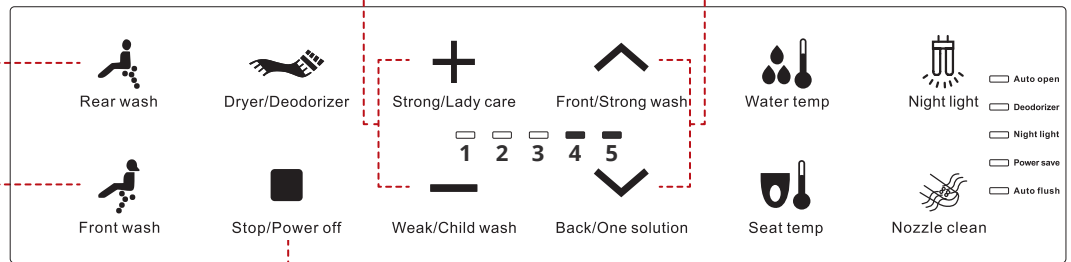


FRONT WASH

Press , nozzle reaches out to work; Press again, it changes to front oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again to stop oscillating cleansing, it switches back to front wash.

STOP



Stop the current cleaning operation. If do not press the stop button, rear washing/ front washing will stop automatically after 2 min. Press this button for 3sec. to turn it off

DRYER

Press , to start warm air drying. Press again change to removable air drying, swings back or front. Press again to stop.

WARM AIR TEMP ADJUSTMENT



4 - Adjust warm air temperature by pressing:

Strong/Lady care Weak/Child wash

DRYER POSITION ADJUSTMENT

5 - Adjust dryer position by pressing:

Front/Strong wash Back/One solution


NOTE: Under removable drying, the dryer position adjustment is unavailable

NIGHT LIGHT

Press this button to turn on the light, press again to close the light, and the corresponding light on the right will be on or off simultaneously. Repeatable switching.

When you turn on auto flush, smart toilet will flush firstly before you press drying

Deodorizer will turn off when under drying function. The deodorizer will auto-open when drying finished and it will keep working for 1.5 minutes when people leave the toilet seat.

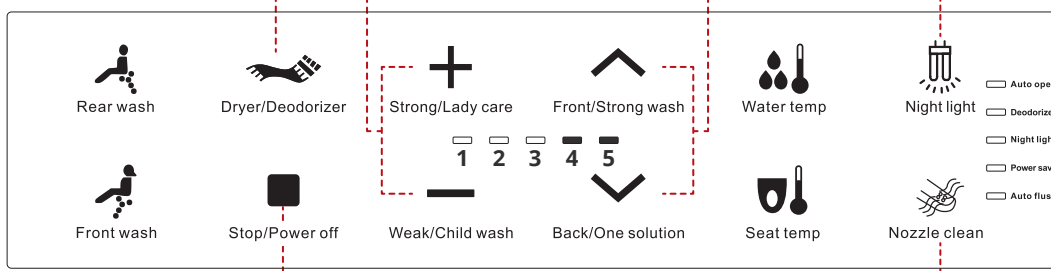

STOP

Turn off the drying function. Or the warm air will stop automatically after running for 4 minutes.

NOZZLE CLEAN




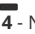 
Press this button to enter nozzle cleaning, then water flows out and you can clean the nozzle.


Nozzle clean is effective when people are not seated. Nozzle will automatically clean the peripheral art of the nozzle before rear wash and front wash.








HOW TO USE

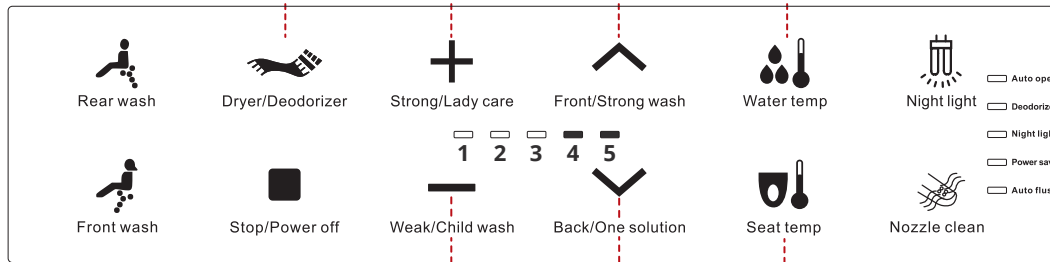









REMOTE CONTROL




The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.


DEODORIZER	LADY CARE	STRONG WASH	WATER TEMP
<p>Press this button for 3 sec. it stops auto deodorization. Press again for 3 sec. it activates auto deodorization, light will shine on the right side indicator</p> <p> Deodorizer</p>	<p>Press this button to enter lady care in idle mode, the nozzle reaches out to work and the water temp is set to the highest level (39°C), the water pressure is set to 2-level, cleaning position is set as default. Water temp/Water pressure unadjustable, cleaning position is adjustable in this mode, and automatic ends after cleaning for 2 mins. Press  to end.</p>	<p>Press this button to enter the powerful washing mode in idle mode, the nozzle reaches out to work and the hole starts to effluent. Water pressure is at the highest level, after washing for 2 mins to end, press  to end.</p>	<p>Press this button to enter water temp adjustment.</p> <p> - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, water temp change to the next level.</p>

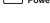 

 Rear wash
  Dryer/Deodorizer
  Strong/Lady care
  Front/Strong wash
  Water temp
  Night light
  Auto open

 Front wash
  Stop/Power off
  Weak/Child wash
  Back/One solution
  Seat temp
  Nozzle clean
  Deodorizer
  Night light
  Power save
  Auto flush

CHILD WASH	ONE SOLUTION	SEAT TEMP
<p>Press this button to enter child wash in idle mode, nozzle reaches out to work. The nozzle position is at the front (Level 5), mini water pressure (Level 1), and the water temp is mid grade (36°C) The washing time is 30 sec. To end press .</p> <p>NOTE: Under this mode cleaning position/ water pressure/ water temp are unadjustable.</p>	<p>Press this button to start in idle mode</p> <p>The order is:</p> <ol style="list-style-type: none"> 1. Rear wash 40 sec. 2. Oscillate wash 20 sec. 3. Warm air dryer 2 mins. 4. Stop <p>In this mode press  to end.</p>	<p>Press this button to enter seat temp adjustment.</p> <p> - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, seat temp change to the next level.</p> <p>Attention: To prevent the low temp scalding, the toilet seat will automatically lowered to below 35°C after sit on the seat for 10 minutes.</p>

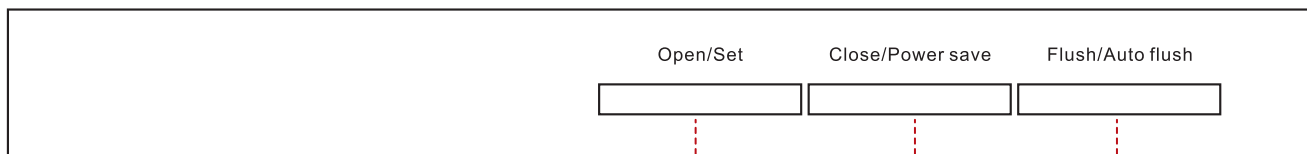

Open/Set Close/Power save Flush/Auto flush

OPEN/SET	CLOSE / POWER SAVE	FLUSH/AUTO FLUSH
<p>Press this button to open up the seat when the seat is closed. Press this button for 3sec. to turn on the automatic seat function. The seat is automatically opened when the person is close to the toilet. The seat is automatically closed after a person has left for two minutes. Automatic opening or closing of the seat is valid only after activating the automatic seat function; The sensor only detects the movement of the human body, and when standing still for a long time, it may cause abnormal movements.</p> <p>Attention: During the electric opening and closing process, do not forcibly close or sway the toilet lid, this will cause a malfunction of it.</p>	<p>When the seat is open, press this button to soft close the seat; Press this button for 3sec, to start power saving mode. After a delay of 1.5 minutes, it enters power-saving mode. In the power-saving state, the seat temperature is kept at 25°C, and the next time it will automatically restore the settings before the power-saving mode.</p>	<p>When pressed, the corresponding indicator will blink on the remote control, and it will flush the toilet once.</p> <p>Press the button for 3sec, to start auto-flush. After leaving the seat for 5sec, it will auto-flush the toilet once. Press again for 3sec, to close it.</p> <p>Attention: When people sit on the toilet and flush the toilet with the remote control or side button. After leaving the toilet, the auto-flush option will not work.</p>

MAINTENANCE

SURFACE CLEANING


⚠ Always disconnect the power plug before cleaning. ⚠

Clean with a soft sponge or cloth and diluted mild detergent (soapy water).

Do NOT use:

- Acidic cleaners (hydrochloric acid, etc.)
- Paint thinner or benzene
- Abrasive pads or sandpaper
- Polishing agents
- Fragrance sprays or insecticides



These may damage the surface.

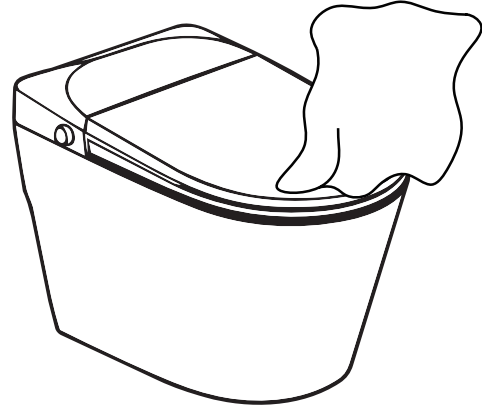

NOZZLE CLEANING


⚠ Attention: Do not use steel brush to clean ⚠

1. Press "Nozzle Clean."
2. The nozzle will extend and rinse automatically.
3. Clean gently with a soft cloth, sponge, or toothbrush.

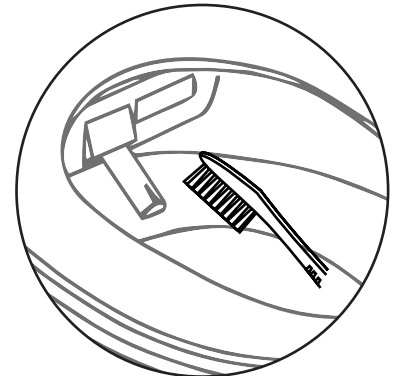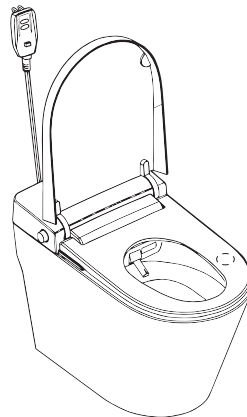


FILTER CLEANING

1. Close the valve and stop the water supply

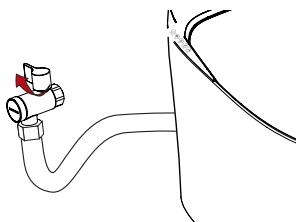


Attention: Do not remove the filter without closing the angle valve. Otherwise water will spray out.

2. Remove the filter.
Unscrew the cover of the filter with a screwdriver and pull it out as shown

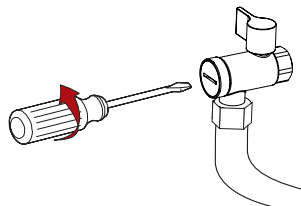


3. Clean the filter.
Get the filter out and clean it thoroughly. Flush off dirt or clean the filter with a toothbrush

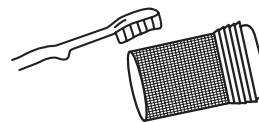

Attention: Do not use any cleaning agents. Clean it with water only. Do not crush the filter when cleaning.

4. Reattach the filter.

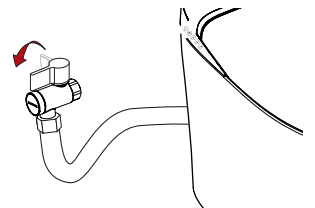

Attention: Open the valve and make sure there is no water leakage.

BATTERY REPLACEMENT

BACK-UP BATTERY


1. Unplug the power cord from the electrical outlet.
2. Remove the seat-lid assembly (refer to Installation Steps 4 and 7).
3. Remove the battery compartment cover.
4. Remove the old battery.
5. Install a new 9V alkaline battery, ensuring correct polarity (+/-).
6. Press the flush button to confirm proper operation.
7. Reinstall the battery cover.
8. Reinstall the seat-lid assembly (refer to Installation Step 9).

TROUBLESHOOTING

ISSUES	CAUSE	SOLUTION
NO POWER	The electrical outlet is not connected to power supply or the plug is not inserted to the bottom	Check if the electrical outlet is connected to the power supply; press the reset key on the plug
NO WATER COMES OUT WHILE CLEANING	Low pressure of water supply	Raise the water pressure
	Water inlet filter blocked	Remount and clean the filter according to the instruction
CLEANSING WATER IS NOT WARM ENOUGH	Water temp setting is incorrect	Readjust
SEAT DOES NOT HEAT	Seat temp setting is incorrect or the toilet is in power saving mode	Readjust
SEAT AND COVER ARE LOOSE	Fixed bolts are loose	Tighten the bolts
REMOTE CONTROLLER FAILURE	Battery ran out	Replace battery
NO RESPONSE WHEN PRESSING THE KEY	Key fault	Reboot
WATER LEAKAGE	Shutoff valve, check water supply hose and water separator they might not be well connected	Reconnect/connet properly

Valley Bidets are warranted for residential use for a period of 1 year from the original purchase date, against any failure from improper manufacturing defects.

RR-S99WHT USER GUIDE

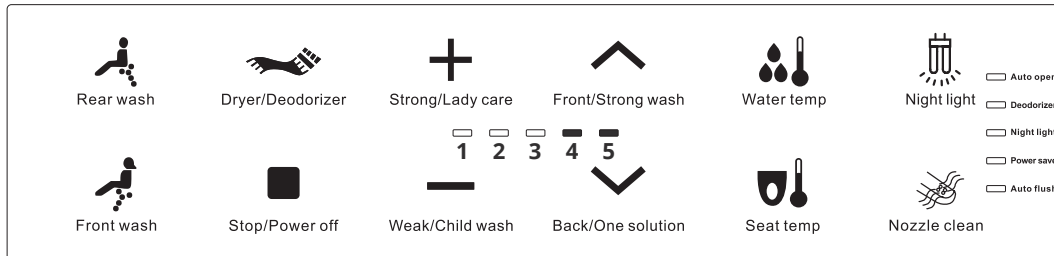


HOW TO USE

REMOTE CONTROL



The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.

REAR WASH

Press , nozzle reaches out to work. Press again, it changes to rear oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again, stops oscillating cleansing, it switches back to rear wash.

WATER PRESSURE ADJUSTMENT



4 - Adjust comfortable water pressure by pressing:

Strong/Lady care Weak/Child wash


NOZZLE POSITION ADJUSTMENT

5 - Adjust nozzle position by pressing:


 

Front/Strong wash Back/One solution

NOTE: Under oscillating cleaning, the nozzle position adjustment is unavailable

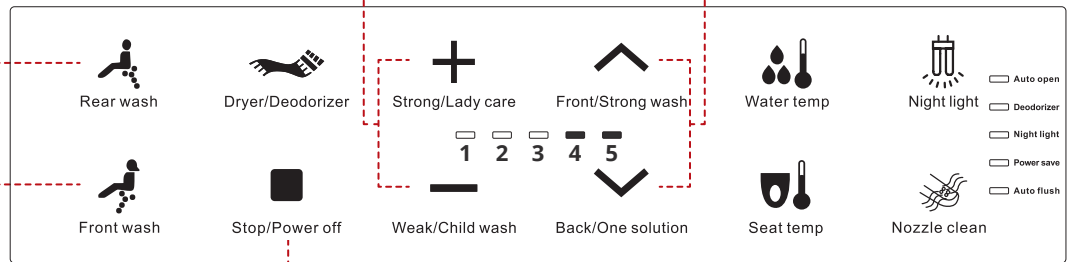


FRONT WASH

Press , nozzle reaches out to work; Press again, it changes to front oscillating cleansing, the indicator#1 blink on remote control, nozzle repeatedly swings back or front. Press again to stop oscillating cleansing, it switches back to front wash.

STOP



Stop the current cleaning operation. If do not press the stop button, rear washing/ front washing will stop automatically after 2 min. Press this button for 3sec. to turn it off

DRYER

Press , start warm air drying. Press again change to removable air drying, swings back or front. Press again to stop.

WARM AIR TEMP ADJUSTMENT



4 - Adjust warm air temperature by pressing:

Strong/Lady care Weak/Child wash

DRYER POSITION ADJUSTMENT

5 - Adjust dryer position by pressing:

Front/Strong wash Back/One solution


NOTE: Under removable drying, the dryer position adjustment is unavailable

NIGHT LIGHT

Press this button to turn on the light, press again to close the light, and the corresponding light on the right will be on or off simultaneously. Repeatable switching.

When you turn on auto flush, smart toilet will flush firstly before you press drying

Deodorizer will turn off when under drying function. The deodorizer will auto-open when drying finished and it will keep working for 1.5 minutes when people leave the toilet seat.

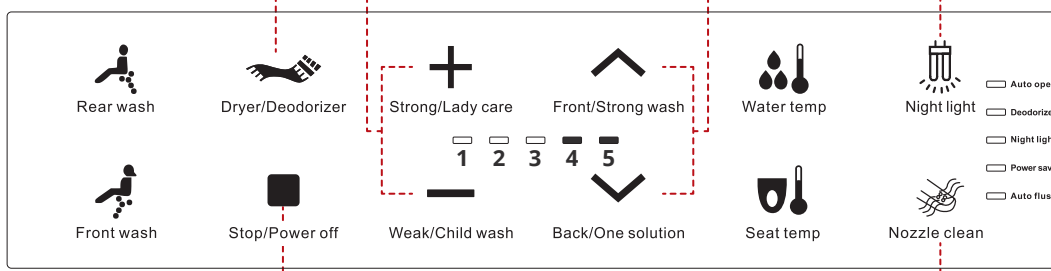

STOP

Turn off the drying function. Or the warm air will stop automatically after running for 4 minutes.

NOZZLE CLEAN




 
Press this button to enter nozzle cleaning, then water flows out and you can clean the nozzle.


Nozzle clean is effective when people are not seated. Nozzle will automatically clean the peripheral art of the nozzle before rear wash and front wash.







HOW TO USE

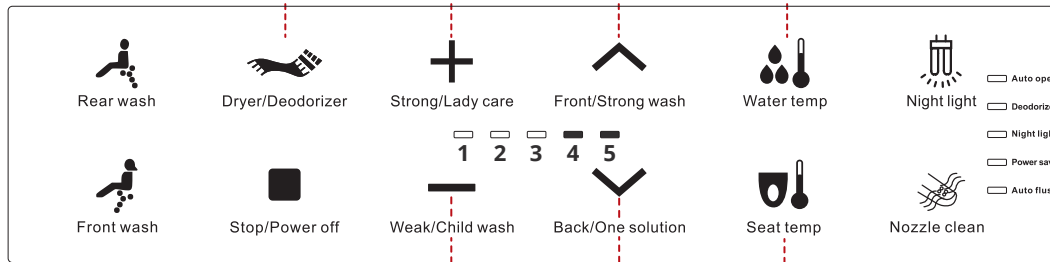





REMOTE CONTROL






The numbers below the remote control indicator is referenced only for functional instructions and actual remote does not have this number.




DEODORIZER	LADY CARE	STRONG WASH	WATER TEMP
<p>Press this button for 3 sec. it stops auto deodorization. Press again for 3 sec. it activates auto deodorization, light will shine on the right side indicator</p> <p> Deodorizer</p>	<p>Press this button to enter lady care in idle mode, the nozzle reaches out to work and the water temp is set to the highest level (39°C), the water pressure is set to 2-level, cleaning position is set as default. Water temp/Water pressure unadjustable, cleaning position is adjustable in this mode, and automatic ends after cleaning for 2 mins. Press  to end.</p>	<p>Press this button to enter the powerful washing mode in idle mode, the nozzle reaches out to work and the hole starts to effluent. Water pressure is at the highest level, after washing for 2 mins to end, press  to end.</p>	<p>Press this button to enter water temp adjustment.</p> <p> - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, water temp change to the next level.</p>




 Rear wash
  Dryer/Deodorizer
  Strong/Lady care
  Front/Strong wash
  Water temp
  Night light

 Front wash
  Stop/Power off
  Weak/Child wash
  Back/One solution
  Seat temp
  Nozzle clean

Legend:
 Auto open
 Deodorizer
 Night light
 Power save
 Auto flush

CHILD WASH	ONE SOLUTION	SEAT TEMP
<p>Press this button to enter child wash in idle mode, nozzle reaches out to work. The nozzle position is at the front (Level 5), mini water pressure (Level 1), and the water temp is mid grade (36°C) The washing time is 30 sec. To end press .</p> <p>NOTE: Under this mode cleaning position/ water pressure/ water temp are unadjustable.</p>	<p>Press this button to start in idle mode</p> <p>The order is:</p> <ol style="list-style-type: none"> 1. Rear wash 40 sec. 2. Oscillate wash 20 sec. 3. Warm air dryer 2 mins. 4. Stop <p>In this mode press  to end.</p>	<p>Press this button to enter seat temp adjustment.</p> <p> - Normal temp, Level 1, Level 2, Level 3</p> <ul style="list-style-type: none"> - Normal temp: No heating - Level 1 is 33°C, 1 light on; - Level 2 is 36°C, 3 lights on; - Level 3 is 39°C, 5 lights on. <p>With each push, seat temp change to the next level.</p> <p>Attention: To prevent the low temp scalding, the toilet seat will automatically lowered to below 35°C after sit on the seat for 10 minutes.</p>

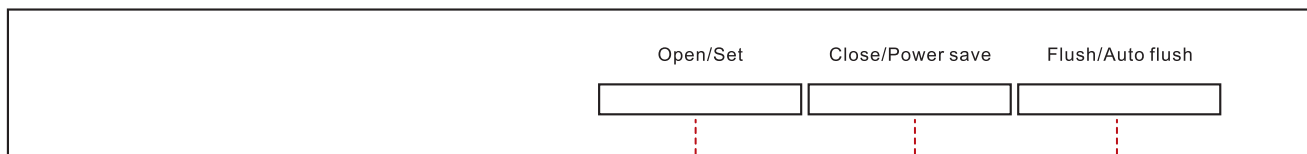

Open/Set Close/Power save Flush/Auto flush

OPEN/SET	CLOSE / POWER SAVE	FLUSH/AUTO FLUSH
<p>Press this button to open up the seat when the seat is closed. Press this button for 3sec. to turn on the automatic seat function. The seat is automatically opened when the person is close to the toilet. The seat is automatically closed after a person has left for two minutes. Automatic opening or closing of the seat is valid only after activating the automatic seat function; The sensor only detects the movement of the human body, and when standing still for a long time, it may cause abnormal movements.</p> <p>Attention: During the electric opening and closing process, do not forcibly close or sway the toilet lid, this will cause a malfunction of it.</p>	<p>When the seat is open, press this button to soft close the seat; Press this button for 3sec, to start power saving mode. After a delay of 1.5 minutes, it enters power-saving mode. In the power-saving state, the seat temperature is kept at 25°C, and the next time it will automatically restore the settings before the power-saving mode.</p>	<p>When pressed, the corresponding indicator will blink on the remote control, and it will flush the toilet once.</p> <p>Press the button for 3sec, to start auto-flush. After leaving the seat for 5sec, it will auto-flush the toilet once. Press again for 3sec, to close it.</p> <p>Attention: When people sit on the toilet and flush the toilet with the remote control or side button. After leaving the toilet, the auto-flush option will not work.</p>

HOW TO PAIR YOUR RR-S99WHT CONTROLLER

1 Press the **TEST** button to **turn OFF** the VA-S99WHT/VA-S66MBLK Smart Toilet.

2 Press the **STOP / POWER OFF** button to **turn ON** the RR-S99WHT Remote Controller.

3 Press and hold both the **WEAK/CHILD WASH** and **BACK/ONE SOLUTION** buttons at the same time for **3 seconds**.

4

As soon as the indicator lights begin to blink, press the **RESET** button to **turn ON** the VA-S99WHT/VA-S66MBLK Smart Toilet.

5 Pairing is complete. Your RR-S99WHT Remote Controller is now successfully connected to your VA-S99WHT/VA-S66MBLK Smart Toilet.