

889500 SHOWER PANEL INSTALLATION GUIDE

Thank you for choosing Valley Acrylic Products. This installation manual provides general information on the installation of our products.

All the information in this guide is based upon the most recent product information available at the time of this publication. Valley Acrylic reserves the right to make changes to product characteristics, packaging, or availability at any time without notice.

Thank you for your purchase!



Please unpack and inspect all parts carefully to make sure they are complete and not damaged. If any parts are damaged or missing, please contact the authorized dealer you purchased the product through.

BEFORE YOU BEGIN

- Please read these instructions carefully before beginning your installation.
- Consult your local building codes to ensure that your installation complies with local standards.
- Remove the unit from its packaging. Before disposing, packaging and taking unit from your sales person, inspect the unit to make sure it is in good shape.
- Should inspection reveal any damage or defect in the finish, please contact the authorized dealer you purchased the product through. The warranty does not cover damages or defects in the finish once the unit has been installed. Valley's responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made directly to the carrier.
- Please refer to your product's specification sheet and ensure that both your unit and build plan measure match the stated sizes.


REQUIRED TOOLS

- Measuring Tape
- Pencil
- Electric drill
- Screwdriver
- Pliers
- Level
- Safety glasses
- Water-resistant glue
- Silicone sealant
- Wrench



Before assembly, flush the water supply pipes thoroughly to drain debris inside (allow the water to run with the main stopcock open for 3min), otherwise dirty particles might affect the function of the shower panel.


SPECS

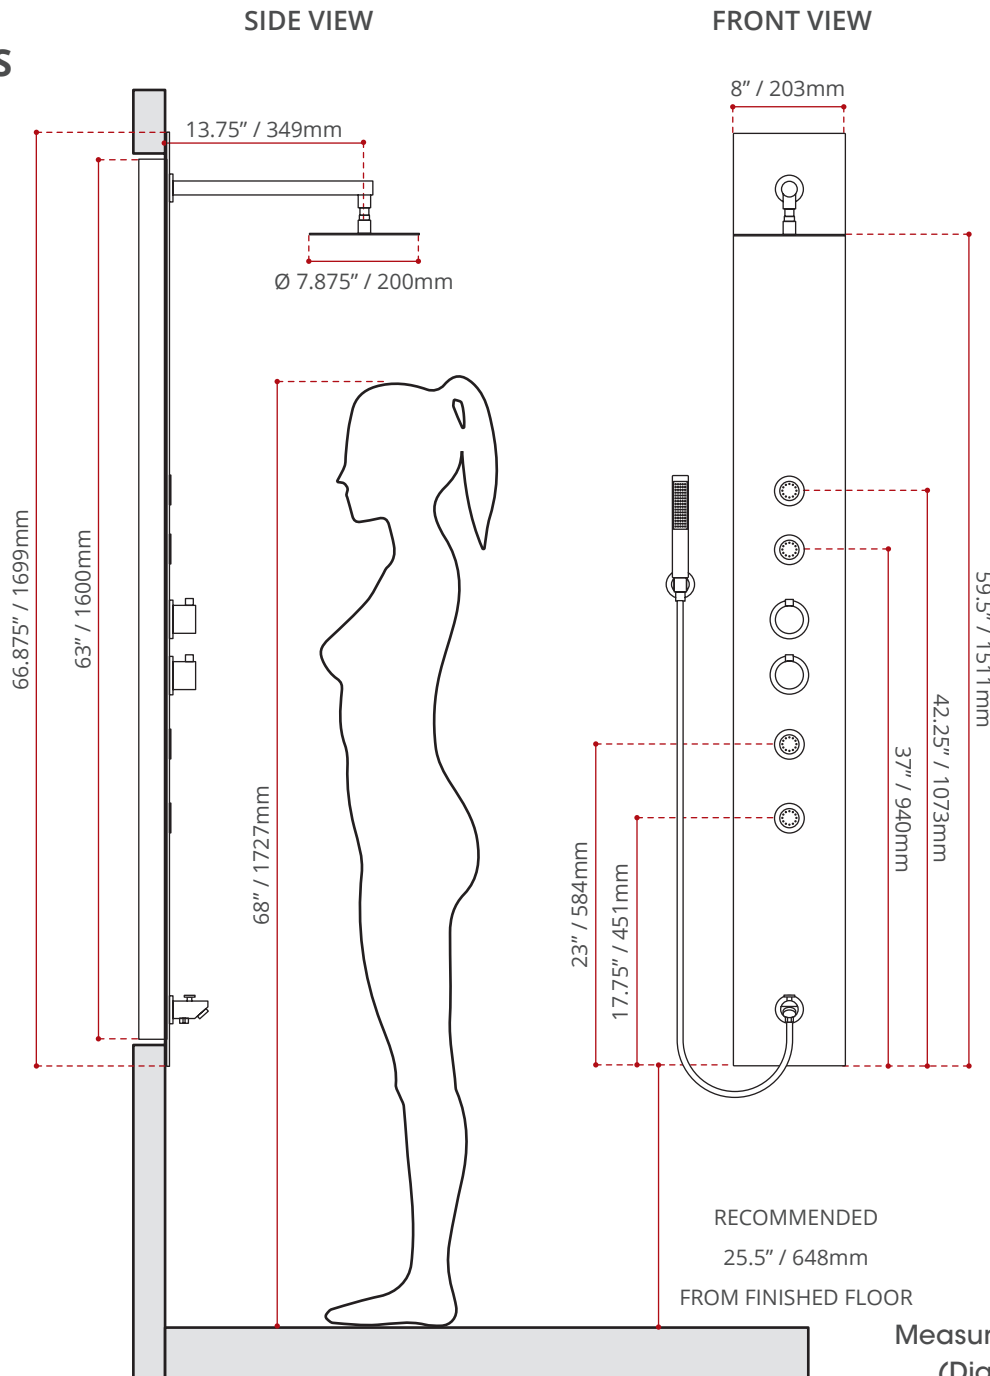

DISCLAIMER:


Measurements may vary $\pm \frac{1}{4}$ "
(Diagram Not to scale)

- 01** First carve a rectangular slot: 7.67" (w) x 64.9" (h) x 3.5" (d), in the wall that is 17.71"/450mm high from the ground and two inlet water pipelines (the overall height shall not be greater than 82.67" / 2100mm)

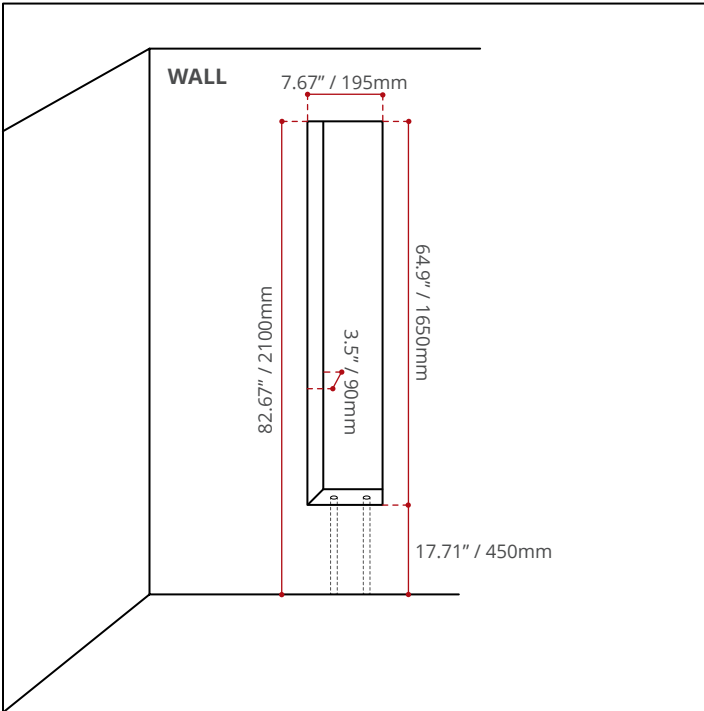


- 02** Connect the embedded hot and cold water supply hoses with the concealing box and place it into the slot created in the wall. Fix the concealing box in place with screws; making sure there is no slipping or loosening.


(Attention: The Filter washer must be installed to avoid dirt clogging)

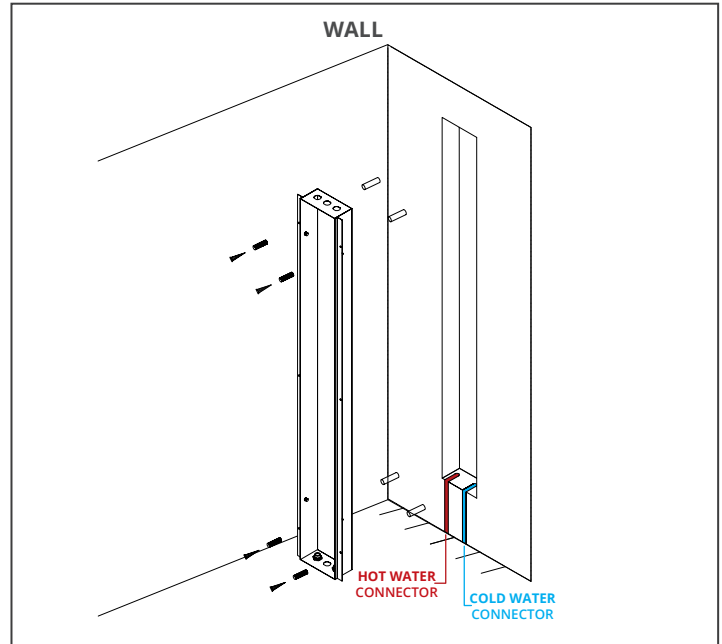


- 03** Paste the wall tiles according to the picture

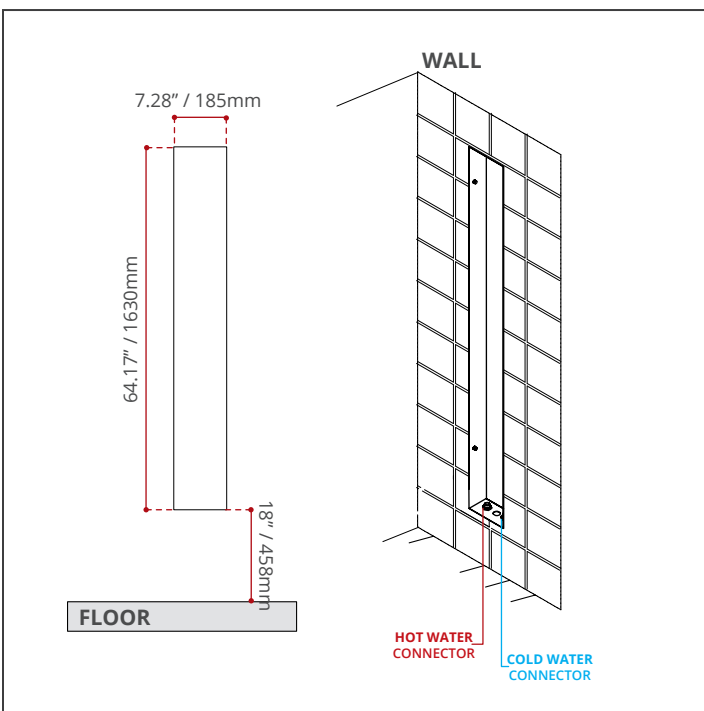


- 04** Drain the dirty water from the hot and cold water inlet hoses, then connect them to the concealing box. Mount the front shower panel to the concealing box as shown.

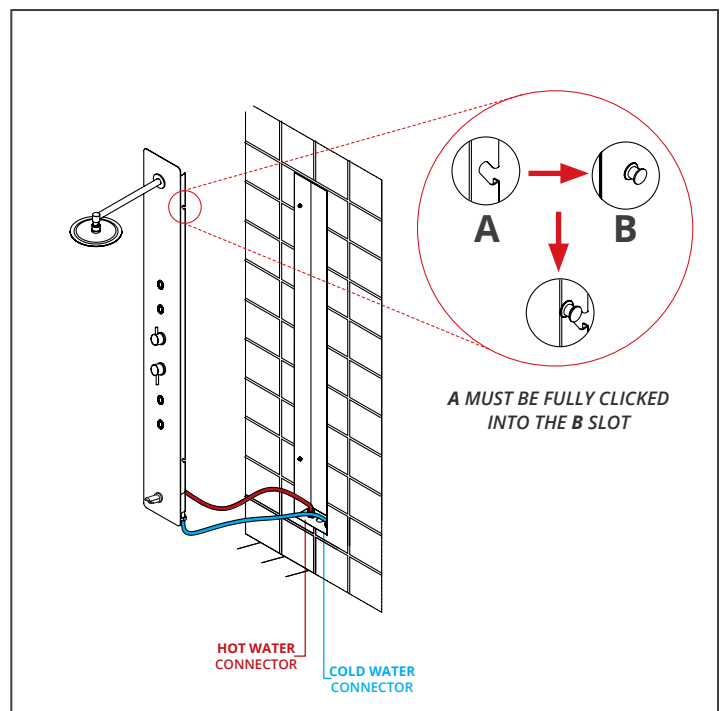

05 Install the handle and Apply silicone between the edges of the shower panel and the handle holder.

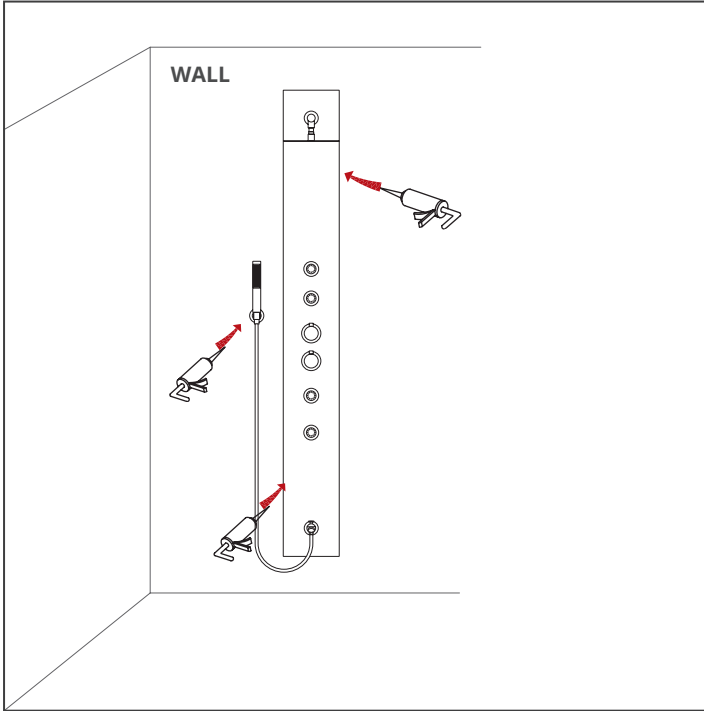


06 PLEASE ALLOW 24 HOURS FOR THE SILICONE TO FULLY CURE BEFORE USING THE SHOWER PANEL.

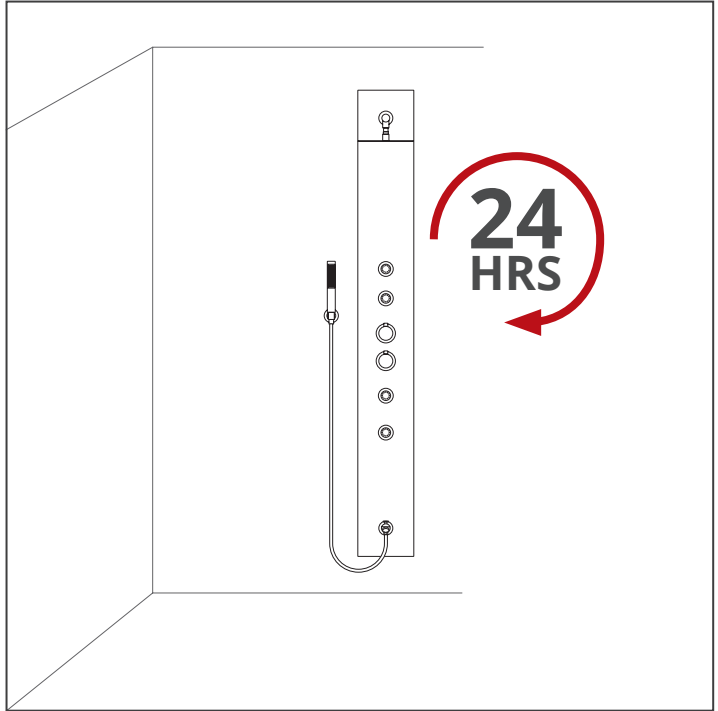

MAINTENANCE

- For daily cleaning, use hot soapy water and vinegar.
- Clean any water stains and dirt on the front panel using a soft cloth only to avoid scratching.
- Avoid using any Acidic or Alkaline cleaners to prevent corrosion.
- If your water supply is contaminated with debris buildup, please avoid use to prevent blockages.
- If you encounter low water pressure the filter gasket of the inlet hoses may need to be cleaned and/or the cartridge.

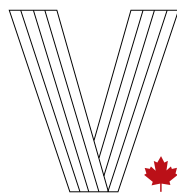

VALLEY[®]

...you dream it, we create it

Congratulations! You are now a part of the Valley Acrylic family, and an owner of a great product!