


# Installation Guide

## Drop-in Semi-Recessed Countertop

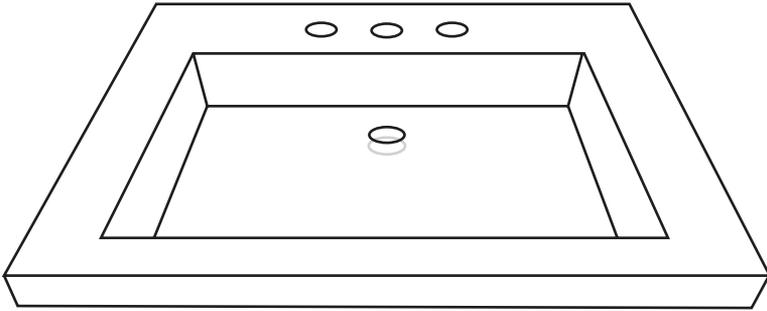


### **Thank You For Choosing Valley Acrylic**

We strive to provide the international bath market with new and innovative bathroom products manufactured to the highest standards. Located in Mission, British Columbia, Valley aims to become an industry leader setting out the highest standards in quality and design.

All the information in this guide is based upon the latest product information available at the time of publication. We reserve the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please take a few minutes to review this guide. If you encounter any installation or performance problems, please call 1-877-398-tubs (8827) from within the USA and Canada.

## Tools and Materials

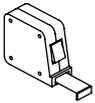

Tape Measure




Drill



Pencil



Safety Glasses

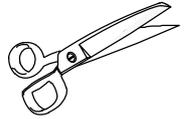

Scissors



Silicone Sealant



Jigsaw

Plus:


- Rags or Paper Toweling
- Template

## Before You Begin



**CAUTION:** Risk of personal injury or product damage. Handle with care. Product can break, chip or cause injury if handled carelessly. Get help lifting the lavatory.


- Observe all local plumbing and building codes.
- Prior to installation, unpack the new lavatory and inspect it for damage. Return the lavatory to its protective carton until you are ready to install it.
- Inspect the existing drain and supply tubing. Replace if necessary.
- For replacement installations, make sure the existing cutout is the same size or smaller than needed for the new lavatory.
- Do not substitute another sealant if one is supplied with this lavatory.
- Valley reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

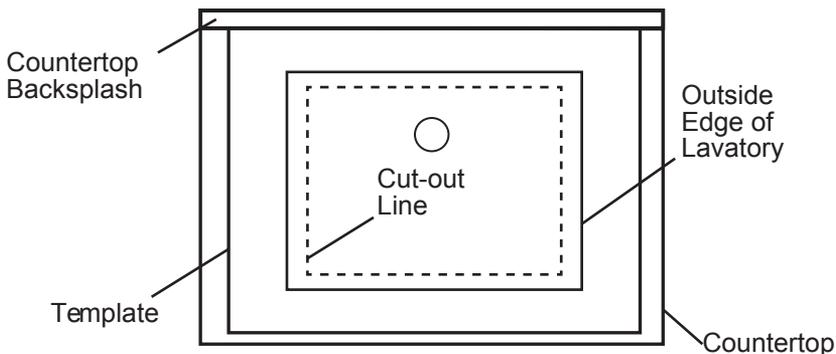

## 1. Preparation

**IMPORTANT!** Use the cut-out template supplied with your specific model. Cutout shape varies by model.

- Position the template on the countertop.
- For Wall-Mount Faucets: Provide sufficient spout overhang into the lavatory basin. The faucet spout length must be at least 5" (12.7 cm) to provide proper performance.
- For Countertop Faucets: Pay special attention to the spout and handle fit clearance when locating the faucet. Use the template to locate the faucet spout hole centerline on the countertop. This centerline is recommended to provide adequate clearance between the edge of the lavatory and the spout.
- Check for adequate clearance between the backsplash, faucet spout and handles, and lavatory. Valley recommends a clearance of at least 1" (2.5 cm).
- Refer to the faucet installation instructions for required clearance, and mark the preferred faucet hole locations using a soft lead pencil.
- Trace the template on the countertop.

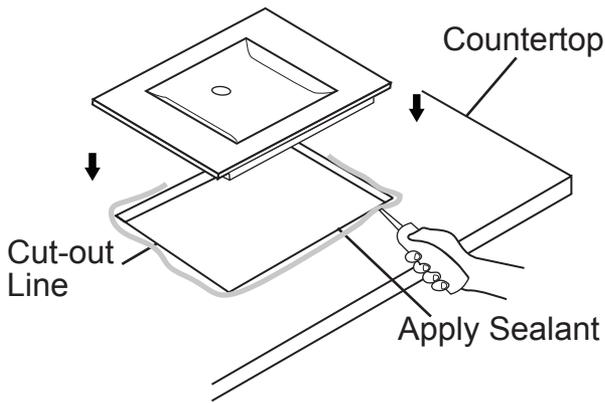

## 2. Install the Lavatory

- Cut the opening by carefully following the pencil line traced from the template.
- Temporarily position the lavatory in the countertop cutout & adjust to fit
- Remove the lavatory.
- Drill the faucet holes.
- Install the faucet and drain according to the manufacturer's instructions.
- Clean the countertop, and carefully position the lavatory in the countertop opening.
- Apply a thin, continuous bead of sealant around the lavatory edges.
- Immediately wipe away any excess sealant, and fill any voids as needed.
- Verify that the lavatory has not moved out of position.
- Allow the sealant to cure at least 30 minutes before proceeding. (Check the sealant specifications)
- Complete the water supply and drain connections.
- Run water into the lavatory and check all connections for leaks.