
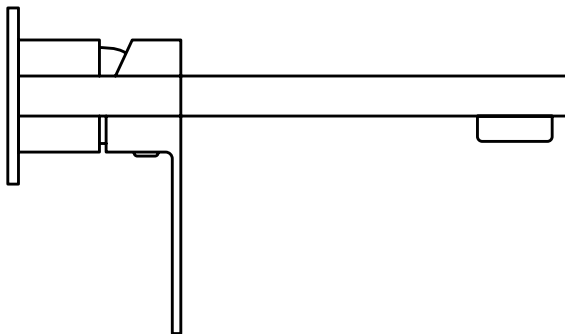


INSTALLATION GUIDE

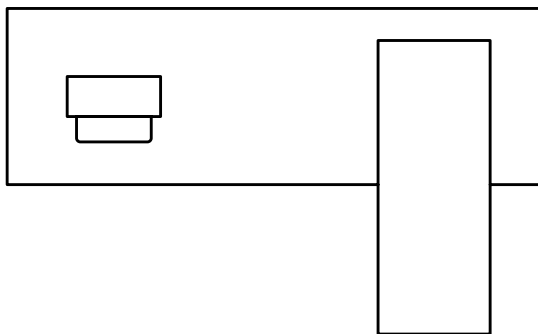

INSTALLATION GUIDE

Remove the unit from its packaging. Before disposing of packaging and taking unit from your salesperson, inspect the unit.


Should inspection reveal any damage or defects in the finish, contact your salesperson. The warranty does not cover damages or defects in the finish once the unit has been installed.

It is recommended that you place the unit in the bathroom before you start. Sectional units should be disassembled if necessary. Conserve all nuts and bolts.

Don't over bend the hose, ensure no hose deformation before or after installation.

CAUTION: FOR BEST RESULTS, WE STRONGLY RECOMMEND THE INSTALLATION OF THIS FAUCET BE DONE BY A LICENSED PLUMBER.




CARE AND MAINTENANCE

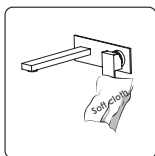

- **Avoid** polishing powder, cleaning powder and any kind of detergent.
- To clean your Valley Acrylic faucet , wash with a soapy nonabrasive cloth. Wipe dry with a soft towel or cloth. We recommend this be done on a regular basis.

AERATOR MAINTENANCE


Clean the aerator gently with a toothbrush.

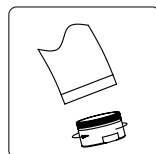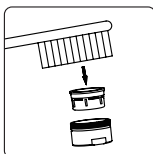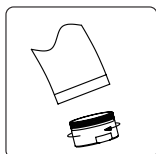




Before assembly, flush the water supply pipes thoroughly to drain debris inside (allow the water to run with the main stopcock open for 3min), otherwise dirty particles might affect the function of the faucet.

01

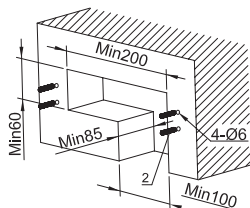


Before installation, open a slot in the suitable place of the wall; Drill four Ø6 holes on the wall, the deepness of hole is about 35mm, then put expanding plastic grain (2) into four holes.

02

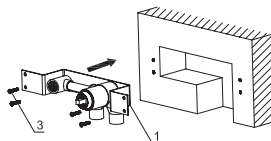

Fix the main body (1) into the wall with the Self-screw(3);

03

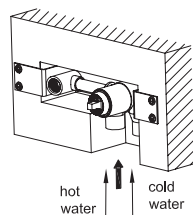


Connect the water supplying pipes and test the tightness of water supplying according to the following water pressure conditions:

While closing of cartridge : $\leq 1.6\text{Mpa}$ to test the supplying pipes and faucet; While opening of cartridge, do not block the water outlet:


$\leq 0.4\text{Mpa}$ to test the supplying pipes and faucet;

04

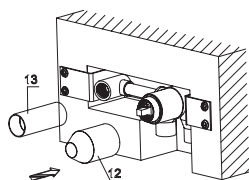


After tightness testing, put on all the plastic guards, fill up the wall spaces, and make sure 20mm is the maximum thickness of the tile; Remove the plastic guards only after drying of the cement.

05

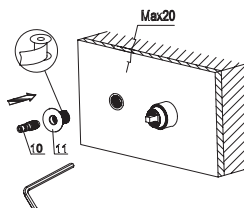

Twist sealing adhesive tape on the thread of the positioning core (11), fit the positioning core(11) and the connecting pipe (10) with a allen wrench

06

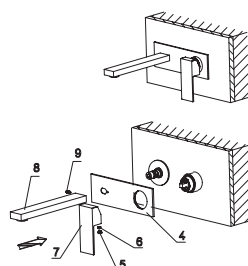

Put the decorative plate(4) on, After adjusting the direction of the spout, fix the spout unit (8) with screwing Bolt (B9) with an allen key (14). At last, fix the handle(?) with screwing Bolt A(6) with allen key.

VALLEY[®]

BELLE COLLECTION
751.208P.100
WALL-MOUNT LAVATORY FAUCET



VALLEY[®]

...you dream it, we create it

Congratulations! You are now a part of the Valley Acrylic family.